

Step 1



Wire the Brivo Door Station

Step 2




Plug the Brivo Door Station into your network and allow it to connect to Brivo

Step 3



Mount the Brivo Door Station following the installation guide and in compliance with local standards

Step 4

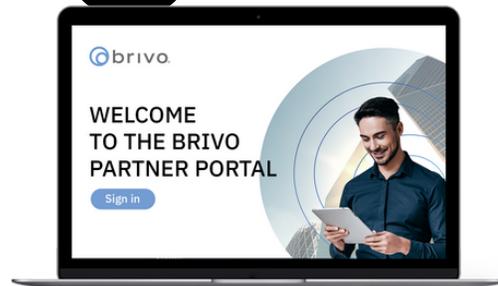

Configure your Brivo Door Station in the Account Configuration tool via Remote Access in Partner Portal. Go to portal.brivo.com or portal.eu.brivo.com

